




A Furukawa Company


## Instructions for Replacing the Diamond Cleaver Blade and Anvil

Replacement Part No. AT03290

### Contents:

- 1 Anvil
- 1 Diamond Cleaver Blade
- 2 Small Replacement Screws

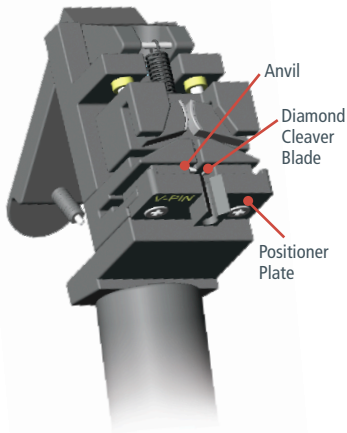

 **Handle the diamond cleaver blade with extreme caution! It is very fragile.**

### INSTRUCTIONS:

- 1 Using a small Phillips screwdriver, remove the positioner plate from the Diamond Cleave Tool.
- 2 With a jeweler's flathead screwdriver, remove the two small screws holding the blade and anvil in the housing. Remove the blade and anvil from the housing.
- 3 Install the new diamond blade and anvil. The anvil should be on the left side, the diamond blade plate on the right. The beveled (slanted) edges on both the blade and anvil tips should be oriented to the top of the cleave tool. (See sample illustration above.) **Do not over-tighten small screws. Extras are provided in case of error.**

**For best results, clean diamond cleaver blade and anvil after every 50 cleaves.**